


Tips...


1. The tighter the rolls the better the machine runs.
2. Twist the drill when you are close to the slot in the gear rather than powering the drill.
3. If joining rolls on the ground put your foot on squares to apply tension.
4. Great for building gates.
5. 3/8" cordless drill required.

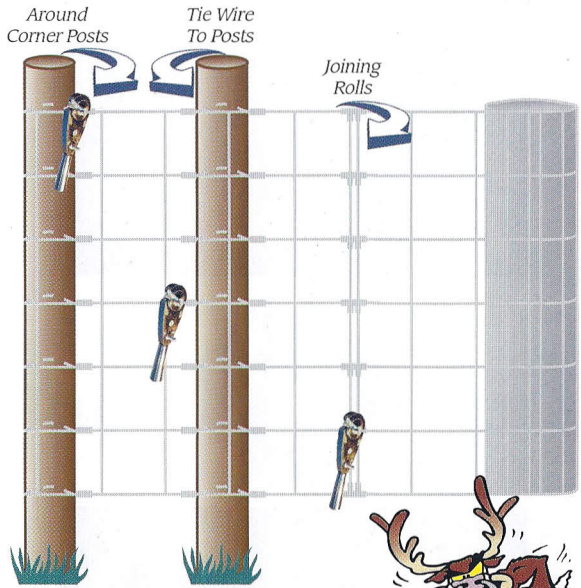


WIRE TWISTER

Printed by Meridian Printing, Lloydminster, Alberta Phone (780) 875-3362


Step 1 Bend wires on end of rolls at 90° to each other. (Wire ends 4"+)

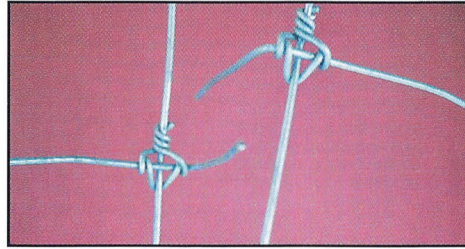


Step 2 Join together over lapping one another.

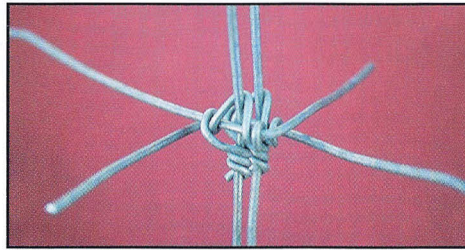


Step 3 Bend around wire to lock rolls.

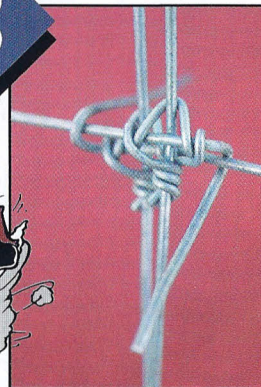

Step 4 Tighten roll then apply wire twisters.

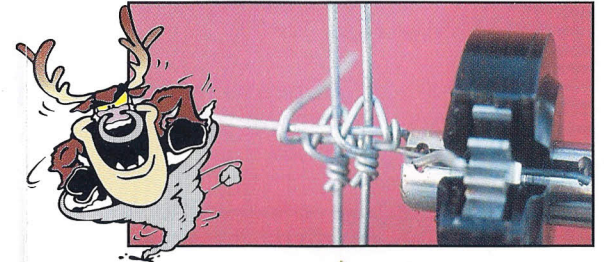

Step 5 Apply power to drill until finished.

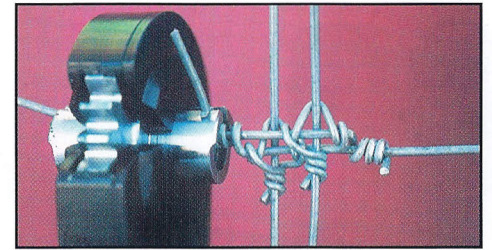

Step 6 Nice tight finish.

